




PVC Fencing / Residential Style

WIDE PICKET PANEL AND GATE

INSTALLATION INSTRUCTIONS

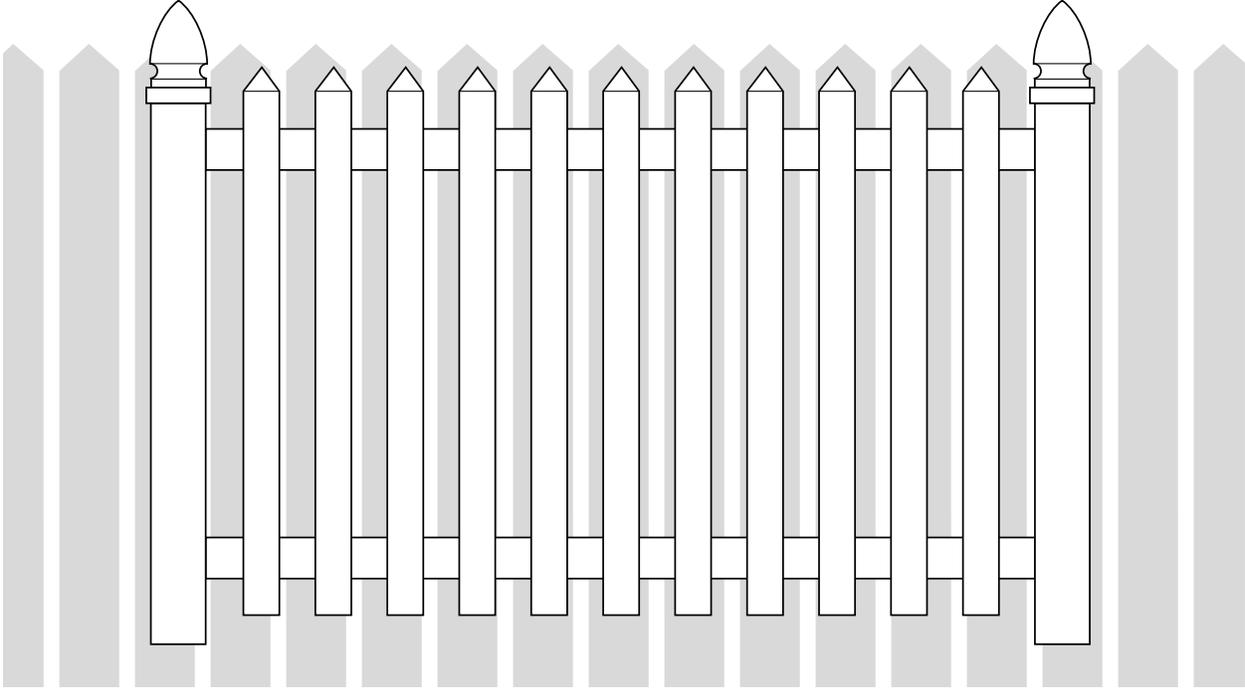

Fencing Without Boundaries™

BEFORE YOU START, IT'S IMPORTANT TO CHECK . . .


- . . . That fence footings do not exceed legally established property lines. If uncertain, refer to real estate agent's line plot or consult a professional surveyor.
- . . . Local codes for specifications regarding frontage locations, allowable fence heights, etc. A permit may be required.
- . . . With local utility companies for locations of underground cables or pipelines.

WIDE PICKET PANEL

PARTS LIST

EACH 3', 42" & 4' HIGH WIDE PICKET PANEL INCLUDES:

- A.** 2" X 3-1/2" Drilled Rails (2)
- B.** 7/8" X 3" Pickets (11)
- C.** 7/8" X 3" Picket Caps (11)
- D.** #10 X 2-1/2" White Stainless Steel Screws (22)
1.5 Oz. Tube PVC Glue (1) – Not shown

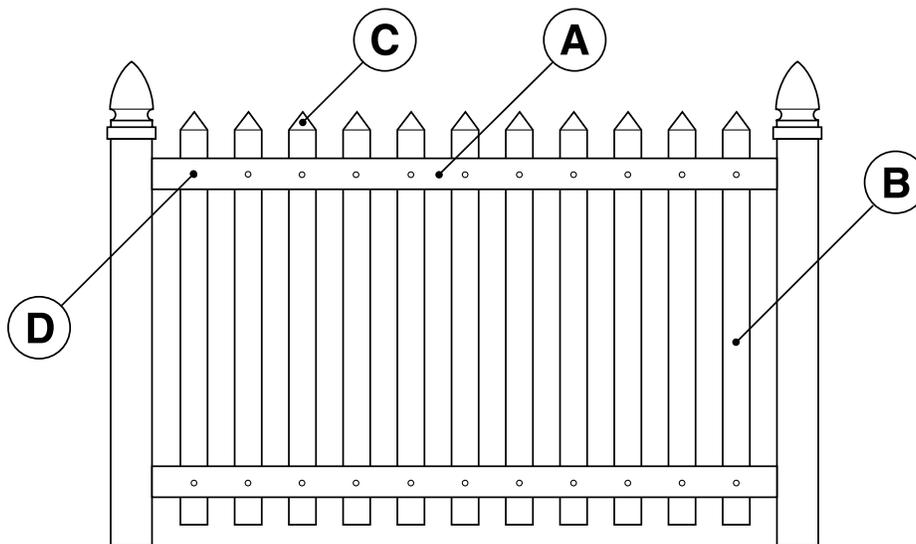

1 PREPARE FENCE LAYOUT

NOTE: Standard fence sections and gates are designed for level terrain. Significant slopes in the terrain will necessitate modifications to panel kits, gate kits and posts.

GENERAL INFORMATION:

Read this instruction sheet completely before starting work.

During panel/gate assembly, work on a soft, non-abrasive surface to avoid scratching the PVC. When cutting PVC components with a power saw, use a fine-toothed blade (plywood blade, finishing blade, etc.).

Plan ahead when working with PVC glue. It dries very fast, requiring speed and precision.

Laying out the fence is the critical first step toward ensuring a quality installation.

STEP 1

Locate the boundary lines to your property.

STEP 2

Drive stakes into the ground along the property line and stretch a string between each stake. **Be sure to extend the string about 24" beyond the property line (Fig. 1).**

It is recommended that all posts be set approximately 6" inside of the property line so that concrete footings do not encroach onto the adjoining property.

STEP 3

Mark the location of each terminal post with a stake (corner, end and gate posts are called **terminal** posts).

When determining the position of the gate posts, refer to Wide Picket Gate section for actual gate opening.


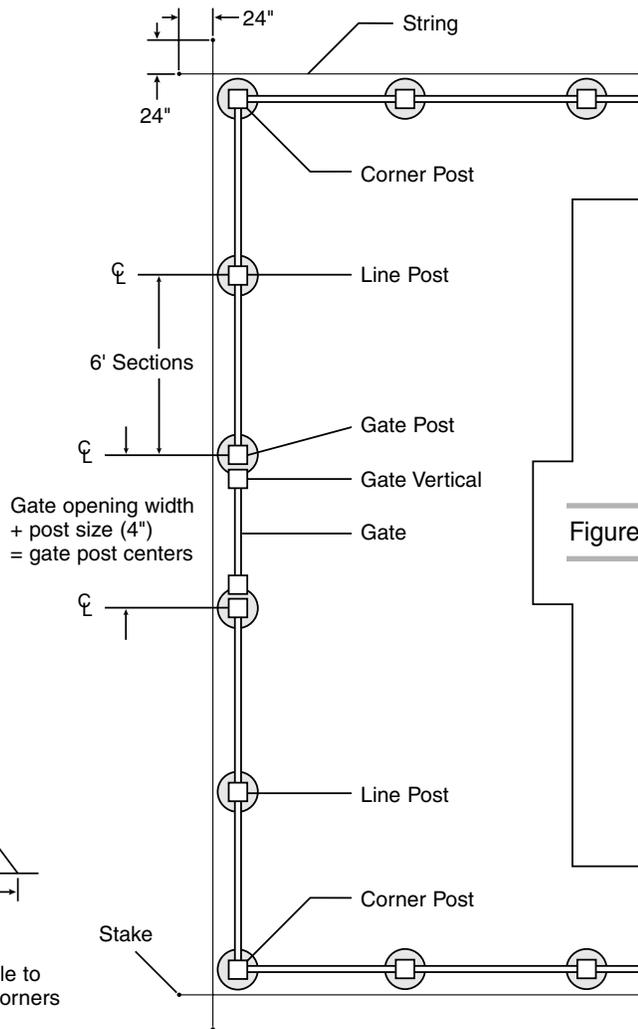


Figure 1

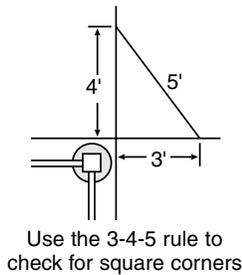

2 **SETTING TERMINAL POSTS**

Although post depth and hole diameter will be determined by local weather and soil conditions, holes for terminal posts and line posts are typically dug 8" in diameter and 30" deep with sloped sides (Fig. 2).

STEP 1

Dig all terminal post holes.

SET ALL TERMINAL POSTS IN CONCRETE.

STEP 2

Position the post in the hole. The posts should be centered in the hole and must be square with the fence line so that when the rails are inserted into the posts they will parallel the string line. Check the post on two adjacent sides with a carpenter's level and adjust as necessary to make sure it is plumb. The fence height above grade is determined at this time as well. We recommend 6" be left from the bottom of the bottom rail to the ground.

STEP 3

Pour concrete around post, fill to 2" below ground level. Once the concrete is completely dry, fill the balance of the hole with dirt.

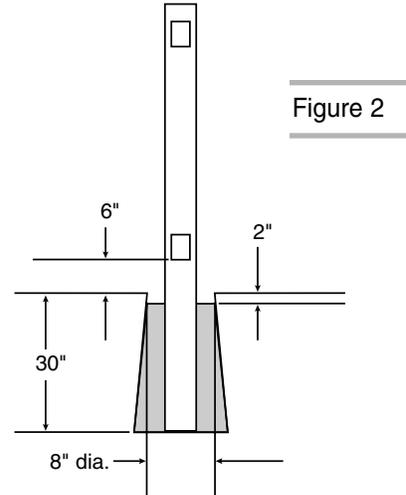


Figure 2

3 **LOCATING AND SETTING LINE POSTS**

STEP 1

After the terminal post footings have hardened enough for the posts to remain stable, stake and stretch a string line taut across the tops of the posts to mark the desired height of the line posts (Fig. 3).

STEP 2

Working along the string line, stake out the positions of all line posts.

STEP 3

Dig all line post holes.

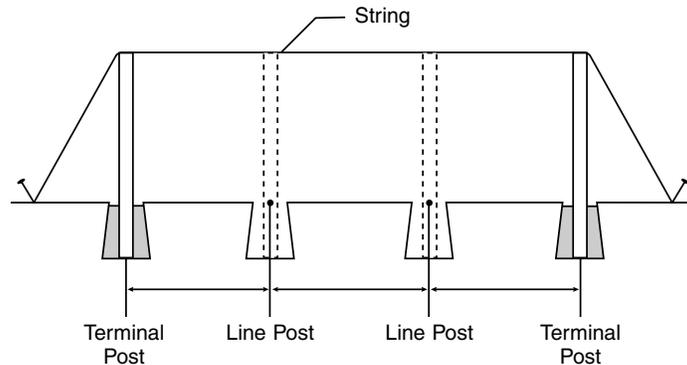


Figure 3

4 **SETTING LINE POSTS AND RAILS**

STEP 1

If post spacing is less than 6' on center, you may need to cut some from each end of rail to ensure that the distance from the post to the first picket remains equal on each end (Fig. 4).

The length of the top rail should be 1/2" less than the center-to-center measurements of the posts.

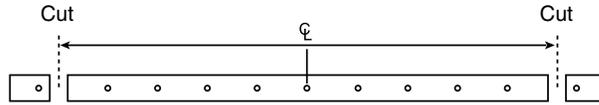


Figure 4

STEP 2

Using the Legend notching tool, notch both ends of the bottom rail with one or two notches on each side (Fig. 5). Hold the rail and the tool steady while notching, avoid twisting the tool.

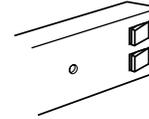


Figure 5

STEP 3

If the rail is going into a post which will be filled with concrete (see section 6, 'FILLING POSTS WITH RE-BAR & CONCRETE'), seal the end of the rail with duct tape to prevent concrete from flowing into it (Fig. 6).

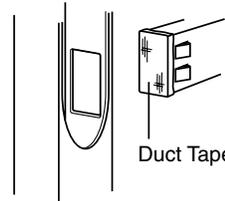


Figure 6

STEP 4

Starting at the terminal post, slide the bottom rail into the bottom hole in the post. Proceeding down the fence line, place the next post into the next hole and insert the loose end of the bottom rail into the post (Fig. 7).

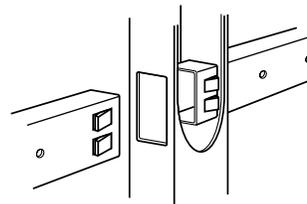


Figure 7

STEP 5

Fill the post hole with concrete.

Check to make sure that the post is set at the correct height, is plumb and level and square to the fence line. Block and support as necessary to keep the posts stable as installation continues.

Repeat these steps until all posts are set with the bottom rails installed.

5 **INSTALLING PICKETS**

STEP 1

Notch all remaining rails.

STEP 2

Seal the ends of top rails with duct tape if required (refer to section 4, "SETTING LINE POSTS AND RAILS", step 3).

STEP 3

Insert the top rail into the post (fig. 8).

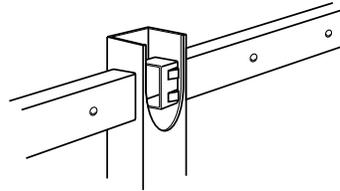


Figure 8

STEP 4

NOTE: The pickets are not universal, they have a top and a bottom. The top hole is located 3-3/4" from the top end of the picket (Fig. 9).

Starting at one end, insert a #10 X 2-1/2" white stainless steel screw through the first hole in the back of the top rail. Align the top hole in the picket with the screw and carefully secure in place (be careful not to over-tighten).

Continue attaching pickets until the panel is complete.

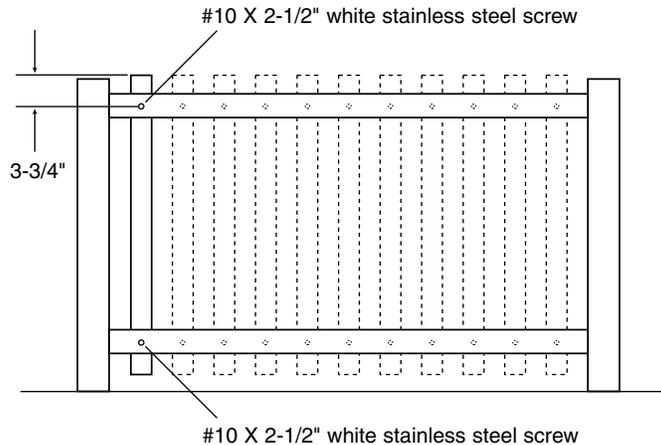


Figure 9

STEP 5

Install picket caps by applying a liberal amount of PVC glue to the inside of the picket and pressing the cap firmly and completely into place (Fig. 10).

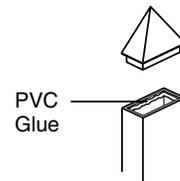


Figure 10

Repeat these steps until all panels have been assembled.

6 FILLING POSTS WITH RE-BAR & CONCRETE

Gate posts* should be filled to within 2" of the top of the post with concrete and re-bar. Corner posts and end posts should be filled half-way with concrete only. Line posts do not need to be filled.

* Make sure the gate hardware is installed before filling gate posts with concrete.

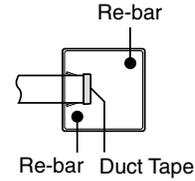


Figure 11

STEP 1

NOTE: If re-bar is not being used, proceed to step 2.

For each end and gate post cut two pieces of #4 re-bar 4" shorter than the post length. Drop two pieces into each post at opposing corners (Fig. 11).

STEP 2

Using a large funnel, fill the posts with concrete (Fig. 12). Tap lightly on the sides of the post to help void air pockets in the concrete.

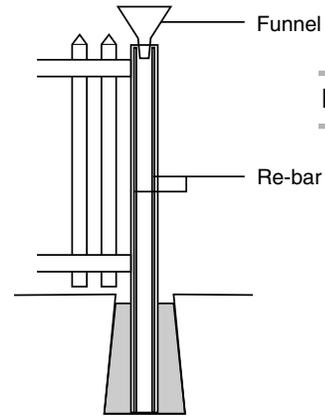


Figure 12

STEP 3

Clean up excess concrete with water before it dries.

7 INSTALLING POST CAPS

Note: Do not install post caps on gate posts until gate installation is complete.

EXTERNAL CAPS (*slide over the post*)

STEP 1 (Option A)

Apply PVC glue to the inside of the cap and press completely onto the top of the post (Fig. 13). Press firmly to ensure that the cap is on as far as it will go.

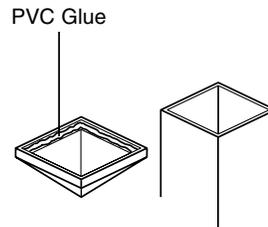


Figure 13

INTERNAL CAPS (*slide into the post*)

STEP 1 (Option B)

Apply PVC glue to the inside of the post and slide the cap completely inside (Fig. 14). Press firmly to ensure that the cap is on as far as it will go.

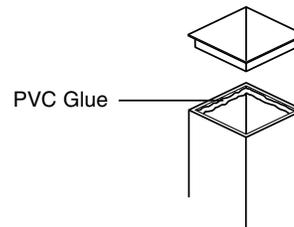


Figure 14


WIDE PICKET GATE

PARTS LIST

Available in 3', 42" and 4' heights. Gate openings are 38", 50" and 62"

EACH WIDE PICKET GATE INCLUDES:

- A. 2" X 3-1/2" Drilled Rails (2)
- B. 4" Sq. Gate Verticals w/Pockets (2)
- C. 4" Sq. Pyramid Caps (2)
- D. 7/8" X 3" Pickets (*)
- E. 7/8" X 3" Picket Caps (*)
- F. #10 X 2-1/2" White Stainless Steel Screws (**)
- G. Standard Hinges (2)
- H. Standard Latch (1)
- I. 3/4" X 1-1/2" Diagonal Brace (1) (4' & 5' wide)
Wood Insert for Diagonal Brace (1) (4' & 5' wide)
- J. #8 X 1-1/2" Stainless Steel Screws (*) (4' & 5' wide)
Screw Cap Washers (*) (4' & 5' wide)
Screw Caps (*) (4' & 5' wide)
- 1.5 Oz. Tube PVC Glue (1) – Not shown

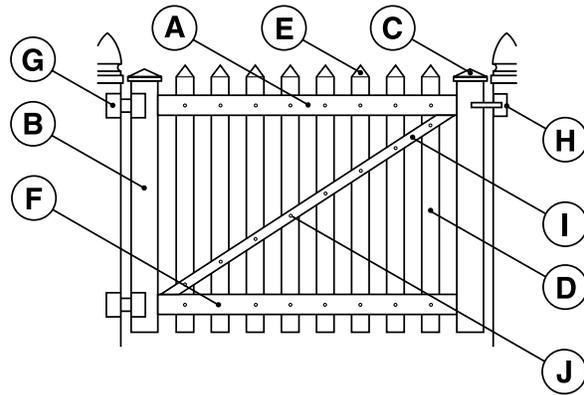

*3' wide = 4, 4' wide = 6, 5' wide = 8

**3' wide = 8, 4' wide = 12, 5' wide = 16

1

DETERMINE GATE WIDTH

Standard 3', 4' & 5' wide gates are made to fit openings measuring 38", 50" & 62" respectively, between the posts. The actual gate width will be 2" less than the opening between posts (Fig. 15).

If your gate opening is narrower than standard, use the following information to modify your gate kit.

STEP 1

Cut the horizontal rails 2-1/2" shorter than the opening width between the posts (Fig. 16).

Make sure to cut the rails so that the space to the first picket is equal on both ends (refer to the Wide Picket Panel section 4, 'SETTING LINE POSTS AND RAILS', Step 1).

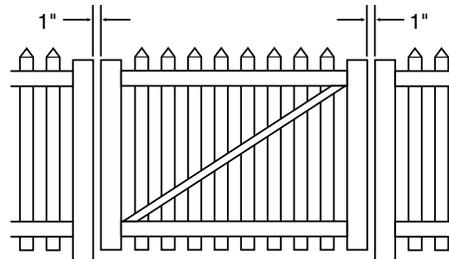


Figure 15

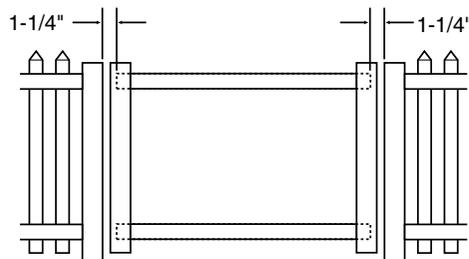


Figure 16

2 GATE ASSEMBLY

NOTE: The gate verticals are not universal, they have a top and a bottom. The top gate pocket is 3" from the top end of the gate vertical.

STEP 1

Assemble the gate panel section (rails and pickets) (Fig. 17).

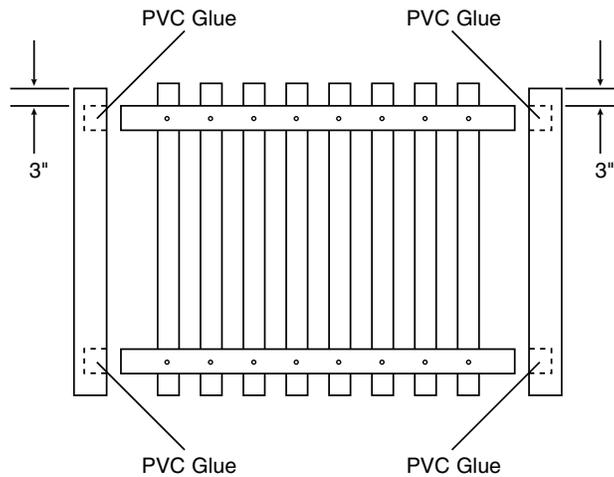


Figure 17

STEP 2

Working on one side at a time, apply PVC glue liberally to the inside of the gate sockets and quickly slide the rails completely into the sockets.

Repeat this process on the second gate vertical.

STEP 3

Check to make sure that the gate is square (the distance between opposite corners should be equal) (Fig. 18).

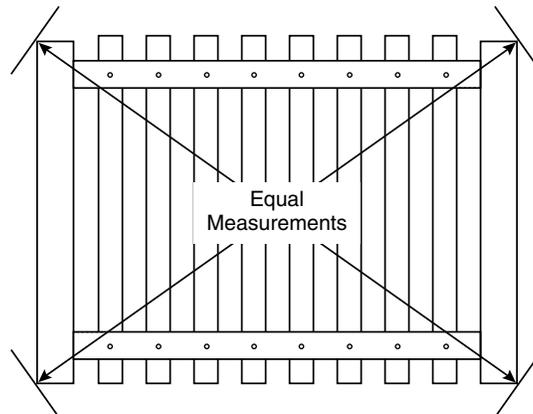


Figure 18

3 **INSTALLING DIAGONAL BRACE**

STEP 1

Position the gate brace (on 4' and 5' wide gates only) on the back side of the gate, between the rails and against the backs of the pickets. The gate brace should attach to the top rail on the latching side of the gate and to the bottom rail on the hinging side of the gate (Fig. 19).

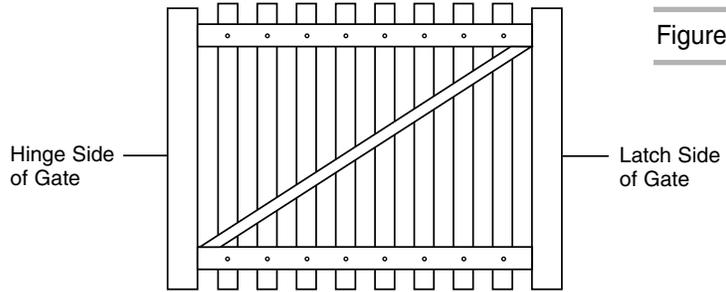


Figure 19

STEP 2

If the gate kit has been modified, mark the correct length and angle and cut the brace. Cut the wood insert to match and slide the wood insert into the diagonal brace (Fig. 20).

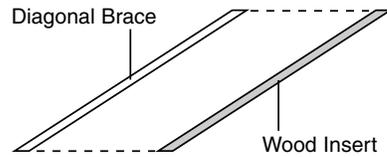


Figure 20

STEP 3

Hold the brace in position and carefully drill through the brace, wood insert and the back wall of the pickets (Fig. 21).

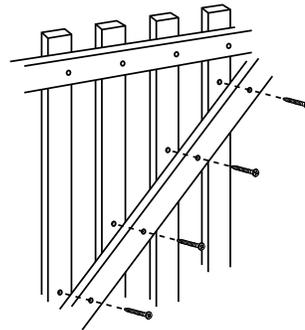


Figure 21

STEP 4

Secure the brace with #8 X 1-1/2" screws, screw cap washers and screw caps (Fig. 22).

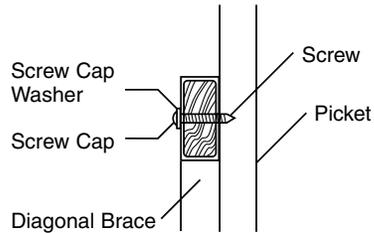


Figure 22

4

INSTALLING PICKET CAPS

STEP 1

Install the caps on the gate pickets as described in the Wide Picket Panel section 5 'INSTALLING PICKETS', step 5.

5

INSTALLING GATE VERTICAL CAPS

STEP 1

Install the caps on the gate verticals as described in the Wide Picket Panel section 7 'INSTALLING POST CAPS'.

6

HANGING THE GATE

STEP 1

Position the gate in the gate opening and block-up the gate as necessary to line up the horizontal gate rails with those of the fence (Fig. 23). Attach hinges and latch to the gate and posts per the installation instructions packaged with the hardware.

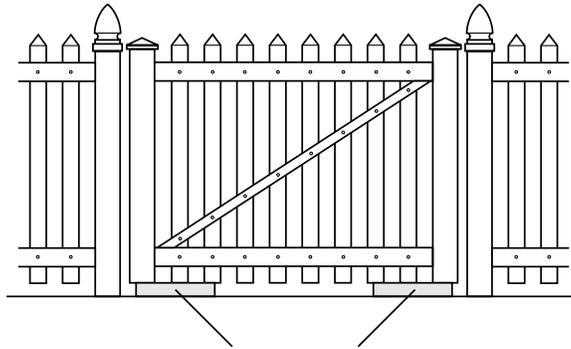


Figure 23

STEP 2

Fill gate posts with re-bar and concrete as described in Wide Picket Panel section 6, 'FILLING POSTS WITH RE-BAR & CONCRETE'.

STEP 3

Install gate post caps (refer to Wide Picket Panel section 7, 'INSTALLING POST CAPS').

7

CLEAN-UP

Clean PVC material as necessary with a non-abrasive (or slightly abrasive) mild biodegradable soap and soft plastic scouring pad. Rinse thoroughly with clean water to remove dirt and soap.

For more information, contact our
Customer Service Department:
1-888-MH-FENCE (toll-free)
4000 W Metropolitan Dr., Orange, CA 92868
e-mail: info@FenceOnline.com • www.FenceOnline.com



Fencing Without Boundaries™